

## LIMITED LIFETIME WARRANTY & INSTRUCTIONS MANUAL

### FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, and Date)
- Date Subdial
- 24 Hour Subdial
- Stopwatch Minute Subdial
- Stopwatch Second Subdial
- Water Resistant as indicated on the watch

### SETTING THE TIME AND DATE

**NOTE:** Before setting the time, make sure the chronograph is stopped and set to zero (12:00) position. If either of the chronograph hands is not at the zero (12:00) position, pull Crown out to the 2nd click position. Press button A to move hands clockwise, press button B to move hands counter-clockwise.

1. Pull the Crown out to the 1st click position when the Second Hand is at the 12 o'clock position. The Second Hand will stop on the spot. Do not press any buttons, otherwise the chronograph hands will move.
2. Rotate Crown clockwise until the previous Day's Date is shown in the Date Window. and Minute are obtained.
3. Pull the Crown out to the 2nd click position, rotate Crown clockwise until the correct Date is shown in the Date Window. Continue to rotate Crown to set the Hour, Minute and the 24-Hour Hands to the desired time. As the Hour Hand moves, the 24-Hour Hand moves correspondingly. When setting the Hour Hand, check if the 24-Hour Hand is set properly.
4. After the time has been set, push the Crown back in to the normal position to re-engage time keeping.

**NOTE:** Never pull the Crown when the watch is wet. If the Date is set between the hours of around 9:00PM and 1:00AM, the Date may not change on the following Day.

### HOW TO USE THE STOPWATCH

The measured time indicated by the stopwatch hands, move independently of the center and 24-Hour Hands. The stopwatch can measure up to 60 minutes in seconds.


\*Seconds elapsed up to one minute (6 o'clock eye)

\*Minutes elapsed up to one hour (9 o'clock eye)

Before using the stopwatch, reset the stopwatch hands to the "60" (12 o'clock) position.

### SPLIT TIME MEASUREMENT

1. Press button A to start timing.
2. Press button B to stop timing.
3. Press button A to stop timing of second event.
4. Press button B to view time of second event.
5. Press button B to reset.

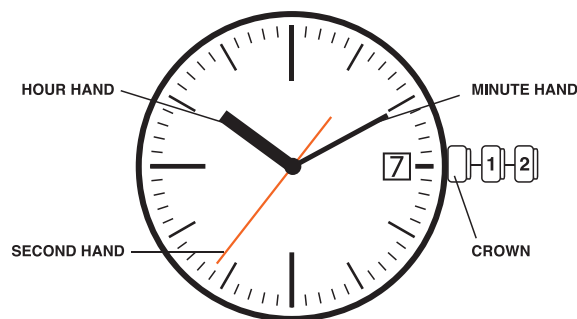

### WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

### USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

### RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

**WWW.ARMITRON.COM**

**YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE.** Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.

## LIMITED WARRANTY

This Armitron Adventure Watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for \$9.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) **DO NOT SEND CASH.** No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made. The movement of any timepiece requires periodic cleaning/timing which is not a defect and, as such not warranted. After one year from the date of purchase each cleaning/timing will be performed as required without charging a fee in excess of the specified \$9.95 handling charge. The above remedy is exclusive. Armitron Adventure shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court. **CALIFORNIA RESIDENTS ONLY!!** There is no handling charge for in warranty service. Charges apply only for NON-WARRANTY ITEMS such as cleaning after one year and other routine maintenance.